

G806 OPENVPN manual

File Version: V1.0.0

Overview

This manual introduces the G806 OPENVPN Client function.


1. Introduction

OPENVPN is application layer VPN which bases on Openssl library. It supports bidirectional authentication which bases on certificate, that's to say client needs to authenticate server and server also needs to authenticate client.

2. Configuration

2.1. Enter G806 Web Server

Connect PC to G806 LAN interface or WLAN interface and configure PC into DHCP mode as follow:

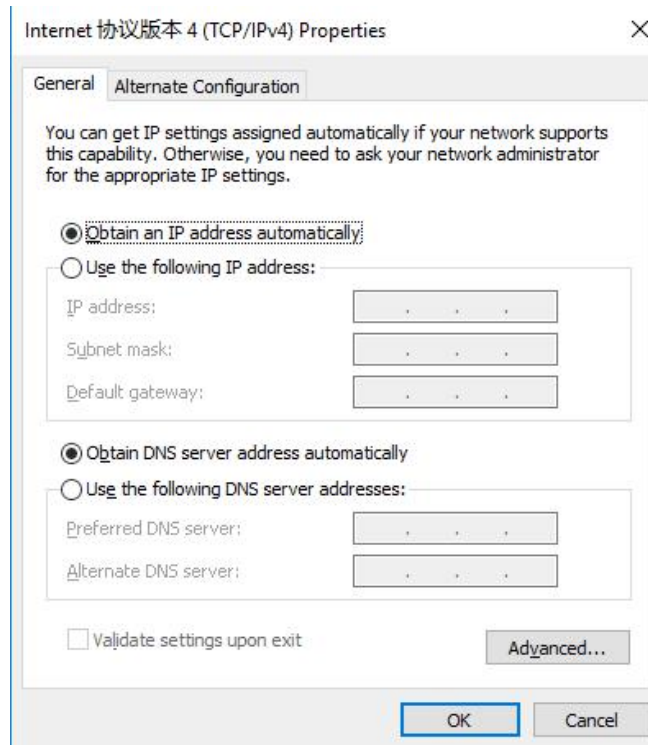

Then enter G806 Web Server by entering G806 LAN interface IP address (Default is 192.168.1.1) and login with username and password(Default both are root). User can switch between English/Chinese from top right corner.

USR-G806

USR IOT
Communication Expert of Industrial IOT
Be Honest, Do Best!

Authorization Required

Please enter your username and password.

Username:


 



Password:

2.2. Add OPENVPN interface

After entering Web Server, add OPENVPN interface as follow:

USR-G806

- > Status
- > Services
- ▼ **Network**
 - Interfaces
 - SIM Card
 - IPSEC
 - Wifi
 - AP Client
 - DHCP and DNS
 - Hostnames
 - Static Routes
 - Diagnostics
 - QoS

| Network | Status | Actions |
|---|--|---|
| <div style="border: 1px solid #ccc; padding: 5px; background-color: #f0f0f0;"> PPTP  pptp-PPTP </div> | RX: 0.00 B (0 Pkts.) TX: 0.00 B (0 Pkts.) | <input type="button" value="Connect"/> <input type="button" value="Stop"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/> |
| <div style="border: 1px solid #ccc; padding: 5px; background-color: #e0ffe0;"> LAN  br-lan </div> | Uptime: 2h 46m 19s MAC-Address: D8:80:4C:D1:21:C1 RX: 3.85 MB (33368 Pkts.) TX: 17.84 MB (33311 Pkts.) IPv4: 192.168.1.1/24 IPv6: FDCA:F406:EBCF:0:0:0:1/60 | <input type="button" value="Connect"/> <input type="button" value="Stop"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/> |
| <div style="border: 1px solid #ccc; padding: 5px; background-color: #ffe0e0;"> WAN_4G  eth1 </div> | Uptime: 0h 0m 0s MAC-Address: 00:A0:C6:00:00:00 RX: 0.00 B (0 Pkts.) TX: 452.00 B (2 Pkts.) | <input type="button" value="Connect"/> <input type="button" value="Stop"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/> |
| <div style="border: 1px solid #ccc; padding: 5px; background-color: #ffe0e0;"> WAN_WIRED  eth0.2 </div> | Uptime: 1h 5m 43s MAC-Address: D8:80:4C:D1:21:C1 RX: 23.92 MB (83884 Pkts.) TX: 3.00 MB (22831 Pkts.) IPv4: 192.168.5.31/24 | <input type="button" value="Connect"/> <input type="button" value="Stop"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/> |
| <div style="border: 1px solid #ccc; padding: 2px; display: inline-block;">  Add new interface... </div> | | |

Create Interface

Name of the new interface

The allowed characters are: A-Z, a-z, 0-9 and _

Protocol of the new interface TUN ▼

Static address
 DHCP client
 Unmanaged
 DHCPv6 client
 PPP
 PPTP
 PPPoE
 PPPoATM
 UMTS/GPRS/EV-DO
 L2TP
 GRE
TUN
 TAP
 SSTP
 Relay bridge

Protocol can be TUN(Route mode) or TAP(Bridge mode). After typing in interface name and choosing protocol, please click 'Submit' to add OPENVPN interface.

2.3. Configure OPENVPN interface

After adding OPENVPN interface, it will be OPENVPN interface configuration web page.

Configure 'General Setup':

Common Configuration

General Setup
Advanced Settings
Firewall Settings

Status RX: 0.00 B (0 Pkts.)
TX: 0.00 B (0 Pkts.)

tun-OPENVPN

Protocol TUN ▼

TCP/UDP Network UDP ▼

Port

Local Interface lan ▼

Local Tunnel Address


Remote Address

Remote Tunnel Address

- Protocol: Can choose TUN(Route mode) or TAP(Bridge mode).
- TCP/UDP Network: Can choose UDP protocol or TCP protocol.

- Port: Listening port of OPENVPN Client.
- Local Interface: Choose wan_wired or wan_4g according to how G806 accesses to network.
- Local Tunnel Address: Server will automatically distribute if user don't fill it.
- Remote Address: Server IP or domain name.
- Remote Tunnel Address: Server will automatically distribute if user don't fill it.

After configuring 'General Setup' and clicking 'Save&Apply', please configure 'Advanced Settings':

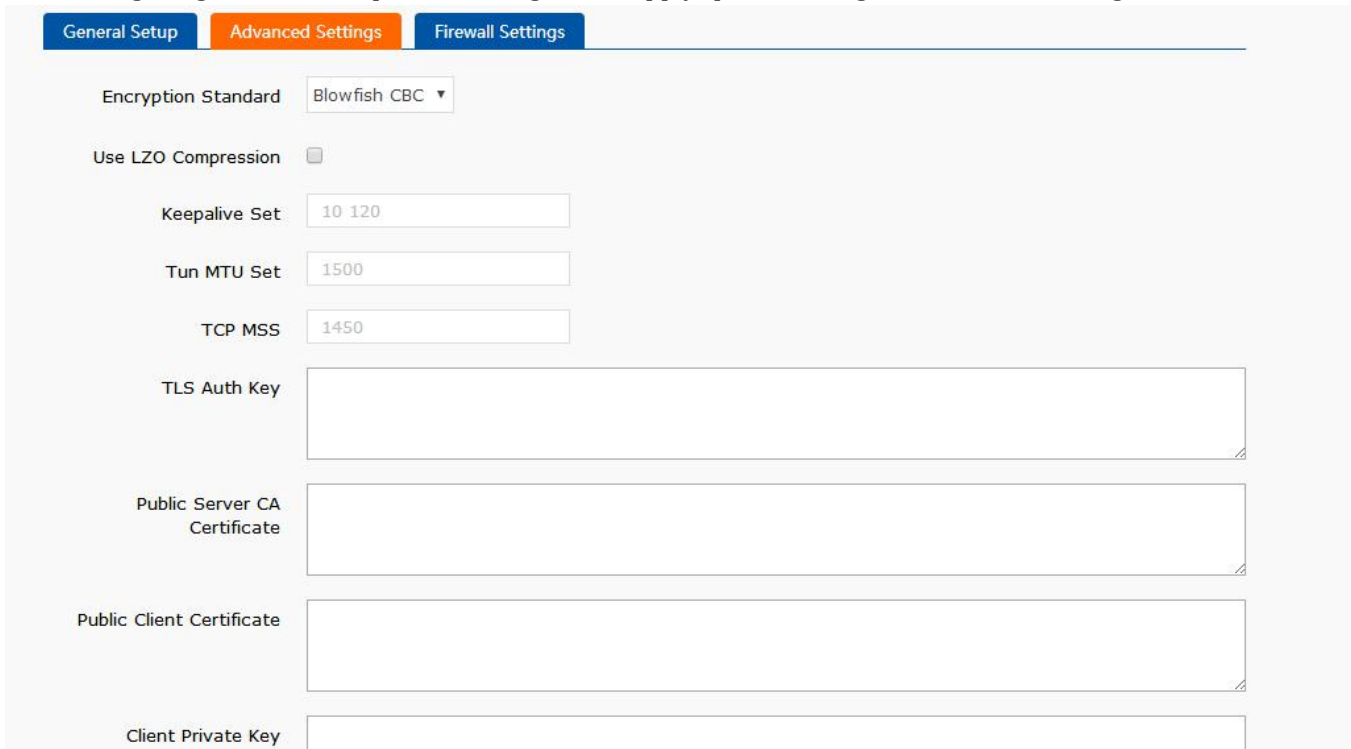

- Encryption Standard: Include Blowfish CBC, AES-128 CBC, AES-192 CBC, AES-256 CBC, AES-512 CBC.
- Use LZO Compression: User can check it to enable LZO Compression in data transmission.
- Keepalive Set: Default is 10 120.
- Tun MTU Set: Configure MTU value of tunnel.
- TCP MSS: Maximum segmenting size of TCP data.
- TLS Auth Key: Authentication key of Transport Layer Security.
- Public Server CA Certificate: Public CA certificate of Server and Client.
- Public Client Certificate: Client certificate.
- Client Private Key: Client private key.

Note:

1. Before Client connecting to Server, Server should provide: CA certificate, Client certificate, Client private key, TLS authentication key.
2. After getting above certificates and keys, just copy them into corresponding edit box in 'Advanced Settings'.

After configuring 'Advanced Settings' and clicking 'Save&Apply', OPENVPN interface has finished configuring.

3. Contact Us

Company: Jinan USR IOT Technology Limited

Address: Floor 11, Building 1, No. 1166 Xinluo Street, Gaoxin District, Jinan, Shandong, 250101, China

Web: www.usriot.com

Support: h.usriot.com

Email: sales@usr.cn

Tel: 86-531-88826739/86-531-55507297

4. Disclaimer

This document provides the information of USR-G806 products, it hasn't been granted any intellectual property license by forbidding speak or other ways either explicitly or implicitly. Except the duty declared in sales terms and conditions, we don't take any other responsibilities. We don't warrant the products sales and use explicitly or implicitly, including particular purpose merchant-ability and marketability, the tort liability of any other patent right, copyright, intellectual property right. We may modify specification and description at any time without prior notice.

5. Update History

2018-04-17 V1.0.0 established.